


DTC	48	EV Control ECU Communication Circuit Malfunction
------------	-----------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
48	With motor switch ON, condition that logic of each terminal, FABS, RABS, FACC and FREG, is different from that of ERET continues for 0.35 sec. or more	• ERET, FREG, FRO, FLO circuits • FABS, FACC, RABS circuits • EV control ECU • ABS ECU

WIRING DIAGRAM

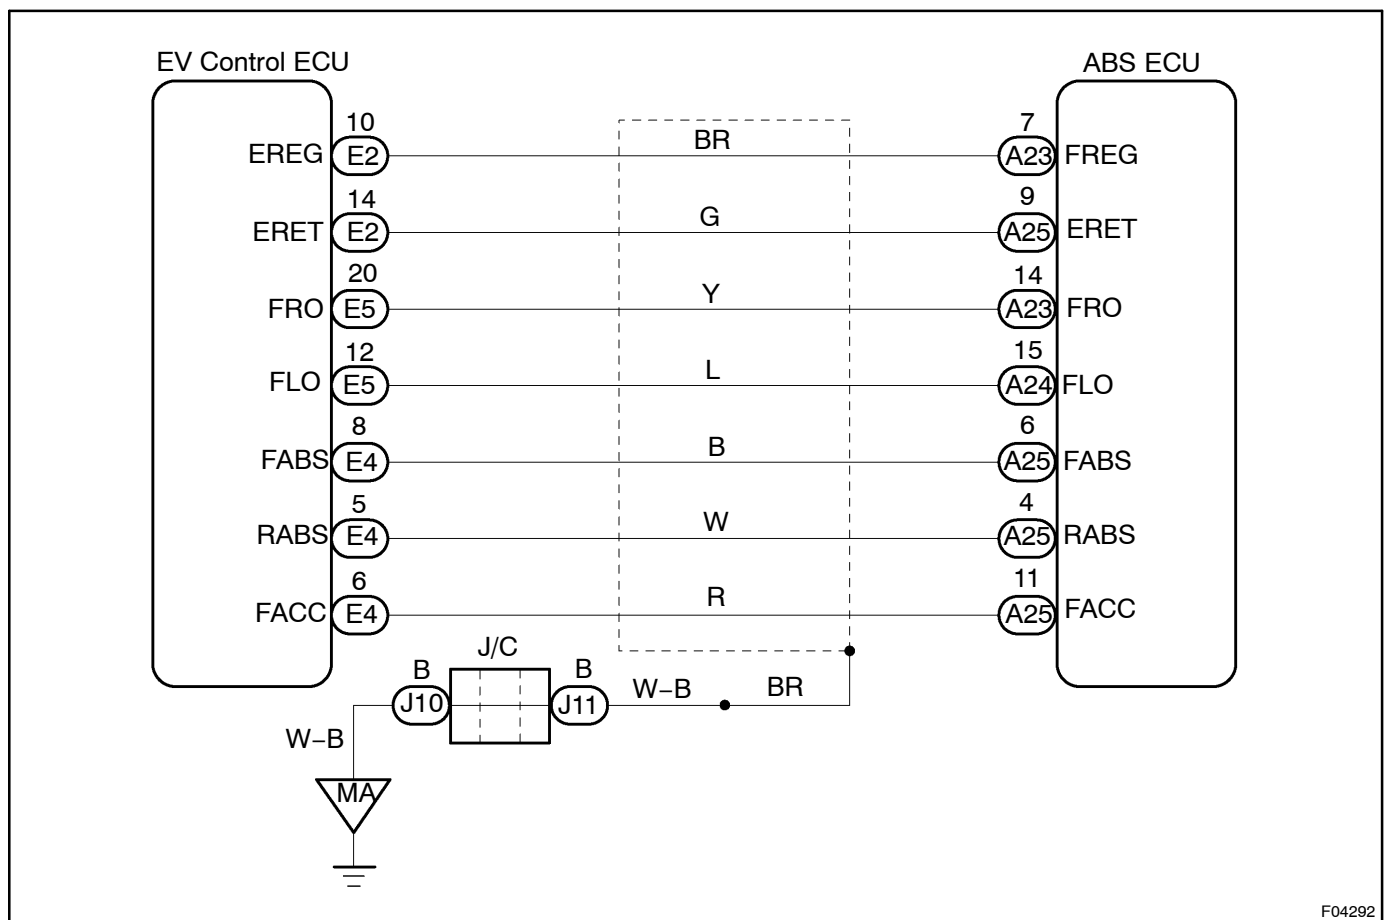

F04292

INSPECTION PROCEDURE

1	Check for open or short circuit in harness and connector between each of terminals ERET, FREG, FLO, FRO, FABS, RABS, FACC of ABS ECU and EV control ECU (See page IN-28).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace EV control ECU or ABS ECU.