



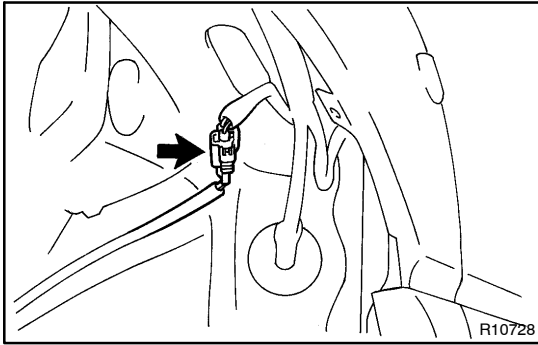

REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the fender liner.
- (b) Disconnect the speed sensor connector.

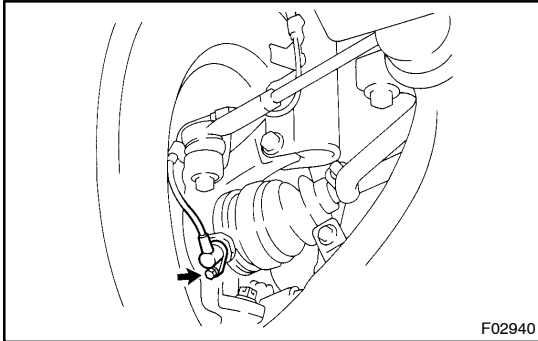

2. REMOVE SPEED SENSOR

- (a) Remove the 4 clamp bolts holding the sensor harness to the body, shock absorber and steering knuckle.
Torque: 5.0 N·m (55 kgf·cm, 48 in.·lbf)
- (b) Remove the speed sensor from the steering knuckle.
Torque: 8.0 N·m (80 kgf·cm, 69 in.·lbf)