


REASSEMBLY

HINT:

Before reassembly, apply MP grease to the parts indicated by arrows.

1. **INSTALL COLLAR AND SPRING NUT**
 - (a) Install the 2 spring nuts.
 - (b) Install the 4 collars.
2. **INSTALL SHIFT LEVER KNOB SLEEVE TO DETENT ROD**
3. **INSTALL DETENT ROD WITH SHIFT LEVER KNOB SLEEVE AND COMPRESSION SPRING TO SHIFT LEVER SUB-ASSEMBLY**

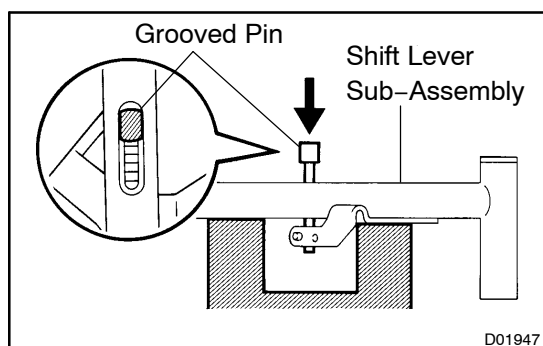


4. **INSTALL GROOVED PIN**
 - (a) Place the shift lever sub-assembly on the table, as shown in the illustration.
 - (b) Using a hammer, drive in the grooved pin to the detent rod pin hole.

NOTICE:


- Assemble the grooved pin to ensure that it fits into the guide hole of the shift lever sub-assembly in parallel.
 - Take care not to insert pin in the wrong direction.
5. **INSTALL SHIFT LEVER SUB-ASSEMBLY TO SHIFT LEVER PLATE**

NOTICE:

Pay attention to the direction of the shift lever sub-assembly.

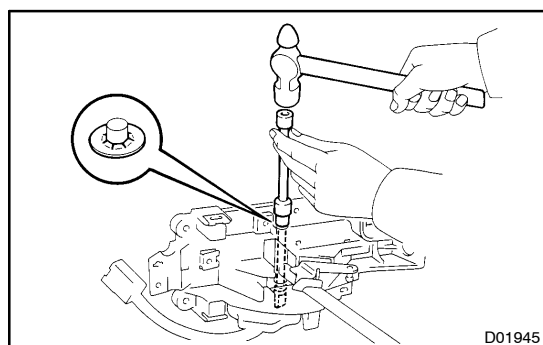


6. **INSTALL CONTROL SHAFT**
 - (a) Install the control shaft and plate washer.
 - (b) Using a socket wrench and hammer, drive in a new push nut.

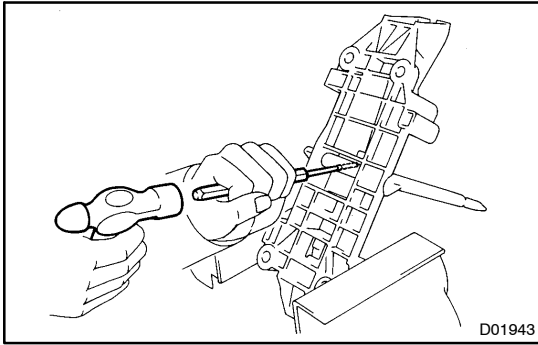


7. INSTALL PIN SPRING

Using a pin punch and hammer, drive in the pin spring.

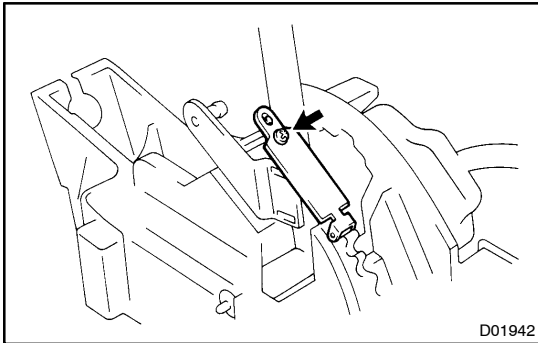

8. INSTALL MANUAL DETENT SPRING


- Install the roller to the manual detent spring.
- Install the manual detent spring and screw. Torque the screw.

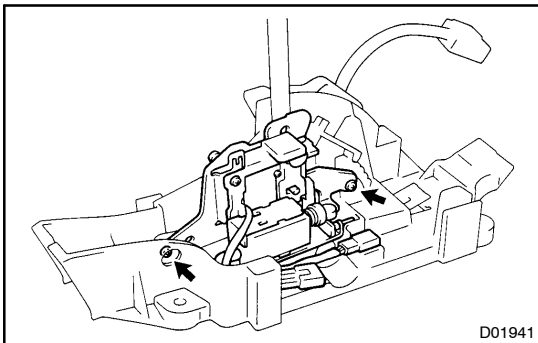

9. INSTALL SHIFT LOCK SOLENOID BRACKET SUB-ASSEMBLY


Install the 2 screws and shift lock solenoid bracket sub-assembly.

Torque: 1.5 N·m (15 kgf·cm, 13 in.·lbf)

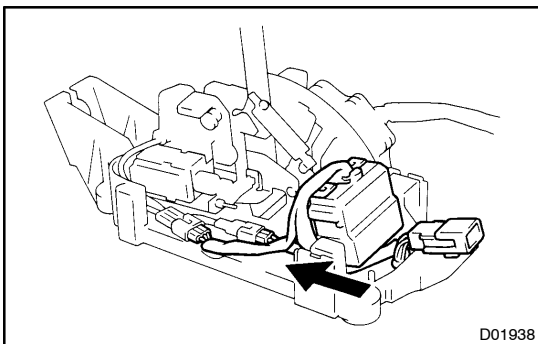

10. INSTALL SHIFT LOCK CONTROL ECU


- Install the shift lock control ECU.
- Connect the 2 connectors.

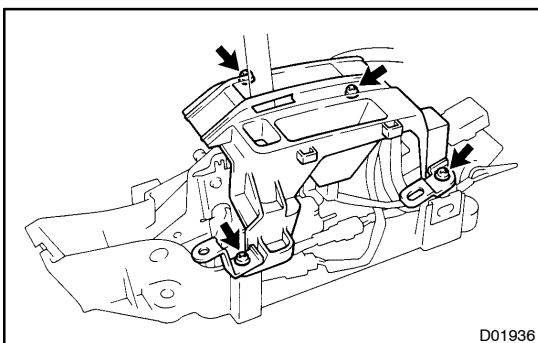

11. INSTALL LOWER POSITION INDICATOR HOUSING


- Install the bulb and connector to the indicator lamp wire.
- Install the indicator lamp wire sub-assembly to the lower position indicator housing.
- Install the lower position indicator housing.
- Install the 4 screws, No.1 and No.2 clamp brackets.

Torque: 1.8 N·m (18 kgf·cm, 16 in.·lbf)

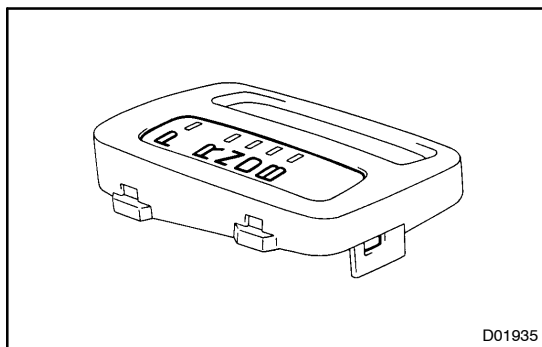


12. INSTALL UPPER POSITION INDICATOR HOUSING WITH CONTROL POSITION INDICATOR PLATE


- (a) Install the control position indicator plate to the upper position indicator housing.

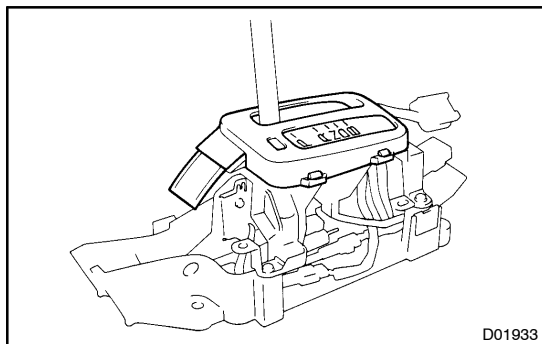

- (b) Install the slide cover and upper position indicator housing with the control position indicator plate.

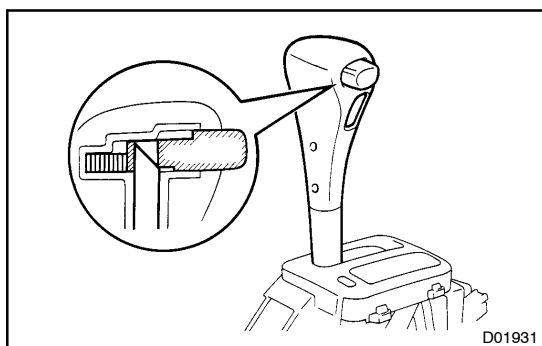


13. INSTALL SHIFT LEVER KNOB BUTTON, COMPRESSION SPRING, SHIFT LEVER KNOB AND NO.2 SLIDE COVER

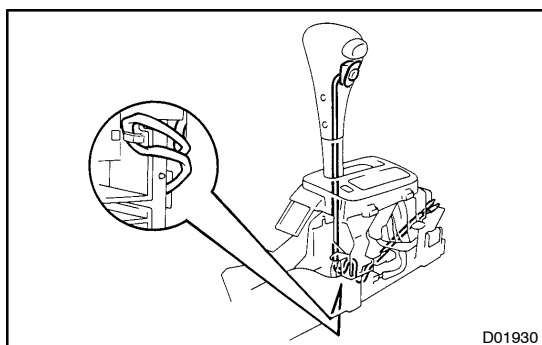

14. INSTALL TRANSMISSION CONTROL SWITCH

- (a) Install the transmission control switch.
(b) Install the terminals of the transmission control switch to the connector.

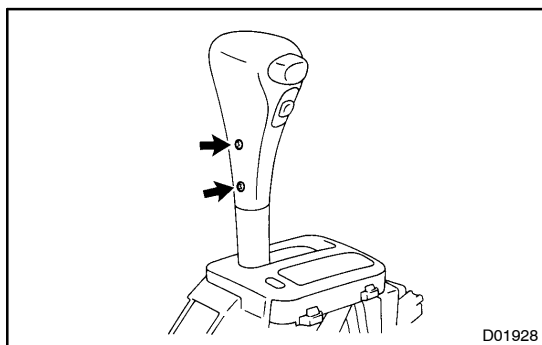

15. INSTALL SHIFT LEVER KNOB SET SCREWS

- (a) Coat the threads of the screws with sealant.

Sealant:

Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (b) Install the 2 shift lever knob set screws.

Torque: 2.2 N·m (22 kgf·cm, 19 in·lbf)