

<b>DTC</b>	<b>C2945/405</b>	<b>Battery ECU Abnormally</b>
------------	------------------	-------------------------------

## CIRCUIT DESCRIPTION

If abnormality occurs in the battery sensor ECU when the battery ECU is in the drive mode or while the battery is charging, this DTC will be recorded. Also, when DTC is records while charging, the battery ECU stops charging and displays ERR on the battery charge panel for 30 seconds.

DTC No.	DTC Detection Condition	Trouble Area
C2945/405	Battery ECU Malfunction	• Battery ECU

## INSPECTION PROCEDURE

### CAUTION:

To avoid receiving an electrical shock, observe PRECAUTION on page [DI-133](#).

**Replace battery ECU.**