


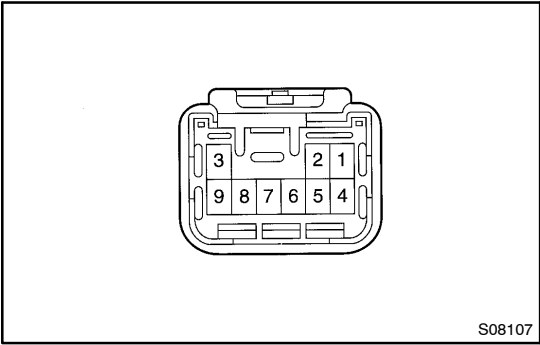

SHIFT POSITION SWITCH INSPECTION

EV00F-02

CHECK CONTINUITY

Using an ohmmeter, check the continuity between each terminal shown below when the shift lever is moved to each position.

○—○ Continuity

Terminal Shift Position	2 (P1)	4 (R1)	5 (N1)	6 (D1)	7 (B1)	1 (E1)	3 (R2)	8 (DB)	9 (E2)
P	○					○			
R		○				○	○		○
N			○			○			
D				○		○		○	○
B					○	○		○	○

V08711

If the continuity is not as specified, replace the switch.