


## INSPECTION

### 1. INSPECTION TRACTION MOTOR

Using an ohmmeter, measure the resistance between the cables.

**Resistance: 23 – 27 mΩ at 20°C (68°F)**

If the resistance is not as specified, replace the traction motor.

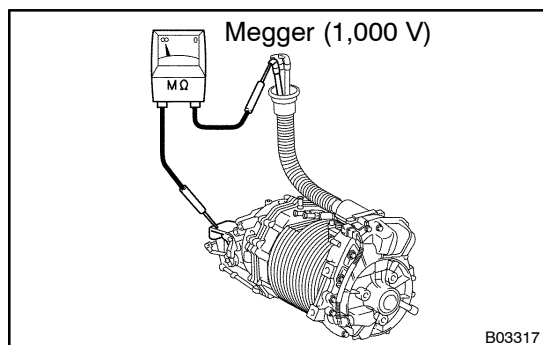

### 2. INSPECT LEAKAGE

Using a megger (1,000 V), measure the insulation resistance.

**Resistance: 10 MΩ or more**

If the resistance is not as specified, replace the traction motor.