


RELAY INSPECTION

AC199-03

1. INSPECT A/C M1 AND A/C M2 RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B + between terminals 1 and 2.	3 – 4	No Continuity


If continuity is not as specified, replace the relay.

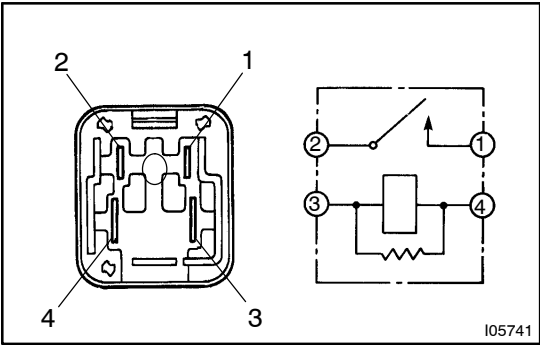

2. INSPECT BLOWER HI RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B + between terminals 3 and 4.	1 – 2	No Continuity


If continuity is not as specified, replace the relay.

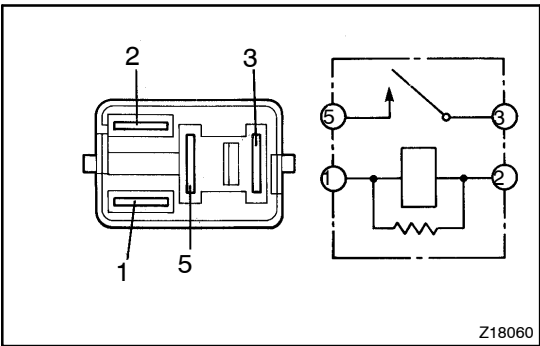

3. INSPECT VALVE MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

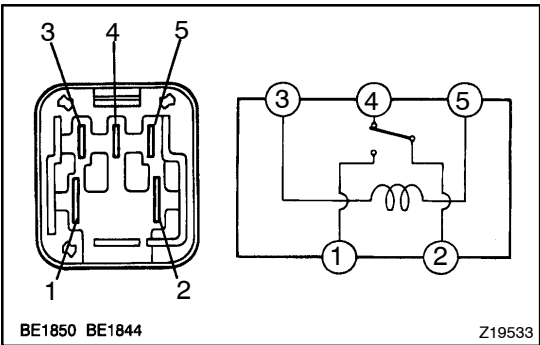

4. INSPECT HEATER MAIN, CONDENSER HI AND LO RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 – 4 3 – 5	Continuity
Apply B+ between terminals 3 and 5.	1 – 2	Continuity

If continuity is not as specified, replace the relay.