



FRONT WHEEL HUB BOLT REPLACEMENT

1. REMOVE FRONT WHEEL

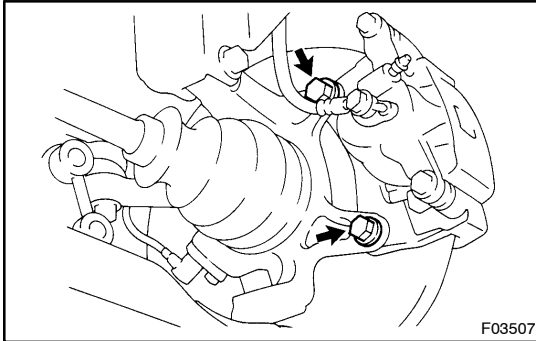

2. REMOVE FRONT BRAKE CALIPER AND DISC


- Remove the 2 bolts and brake caliper from the steering knuckle.
- Support the brake caliper securely and remove the disc.

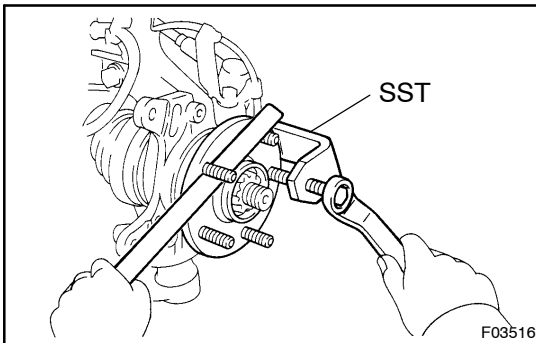

3. REMOVE HUB BOLT

Using SST, remove the hub bolt.

SST 09628-10011

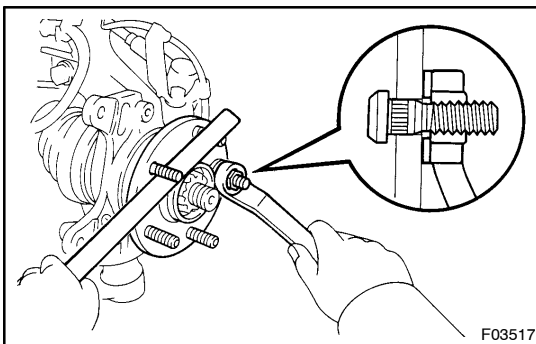

4. INSTALL HUB BOLT

- Install a washer and nut to the hub bolt, as shown in the illustration.
- Install the hub bolt with torquing the nut.

5. INSTALL DISC AND FRONT BRAKE CALIPER

Install the disc and brake caliper with the 2 bolts.

Torque: 107 N·m (1,090 kgf·cm, 79 ft·lbf)

6. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)