


REMOVAL

1. REMOVE INSTRUMENT PANEL (See page [BO-88](#))

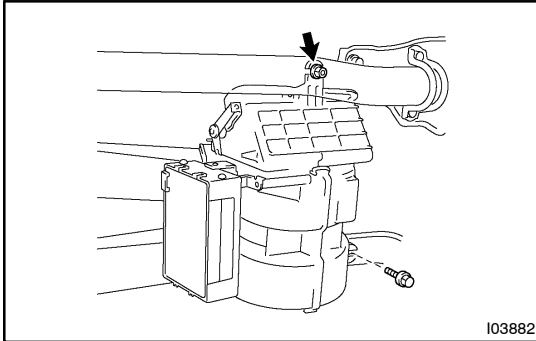

2. REMOVE BLOWER UNIT

Remove the bolt, nut and blower unit.