


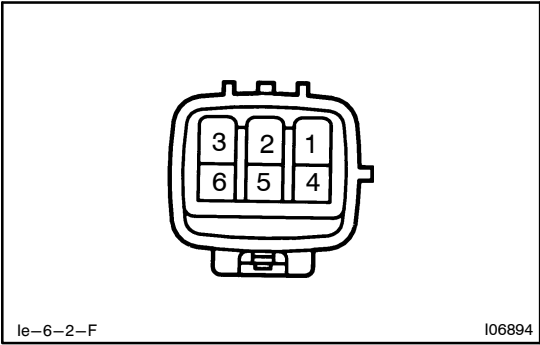

INSPECTION
INSPECT EXAPNSION VALVE RESISTANCE

Measure resistance between terminals.

Tester connction	Specified condition
1 – 2	30.9 – 37.7 Ω
1 – 3	30.9 – 37.7 Ω
1 – 4	30.9 – 37.7 Ω
1 – 5	30.9 – 37.7 Ω

If resistance is not as specified, replace the valve.