

## PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> <li>• With the motor switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.</li> <li>• SRS warning light is always lit up even when motor switch is in the LOCK position.</li> </ul>	<ul style="list-style-type: none"> <li>• SRS warning light circuit (Always lights up when motor switch is in LOCK position.)</li> </ul>	DI-418
<ul style="list-style-type: none"> <li>• With the motor switch at ACC or ON, the SRS warning light does not light up.</li> </ul>	<ul style="list-style-type: none"> <li>• SRS warning light circuit (Does not light up when motor switch is turned to ACC or ON.)</li> </ul>	DI-420
<ul style="list-style-type: none"> <li>• DTC is not displayed.</li> <li>• SRS warning light is always lit up in a DTC check procedure.</li> <li>• DTC is displayed without Tc and E1 terminal connection.</li> </ul>	<ul style="list-style-type: none"> <li>• Tc terminal circuit</li> </ul>	DI-424